


## Belt Tension Adjustment



Unscrewing two screws. Remove the RS232/Guide port panel to exposure the R.A. motor.

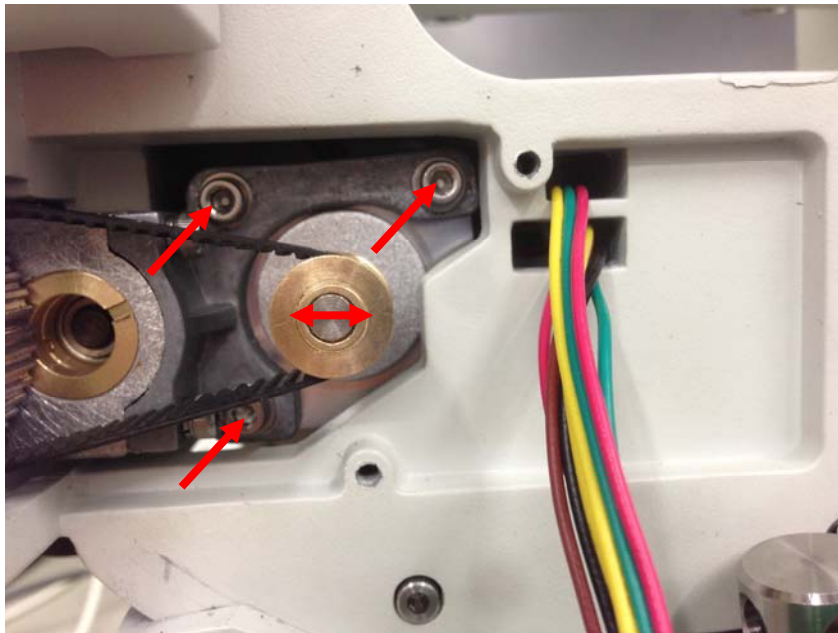

Loosen three hex screws that hold the motor a little bit. Adjust the motor position to adjusting the belt tension. Retighten the hex screws.

Put the side panel back.