


1. Remove the screws .



2. Open the bottom cover of the camera,disconnect the power connector with tweezers.



3. Loose the screw.

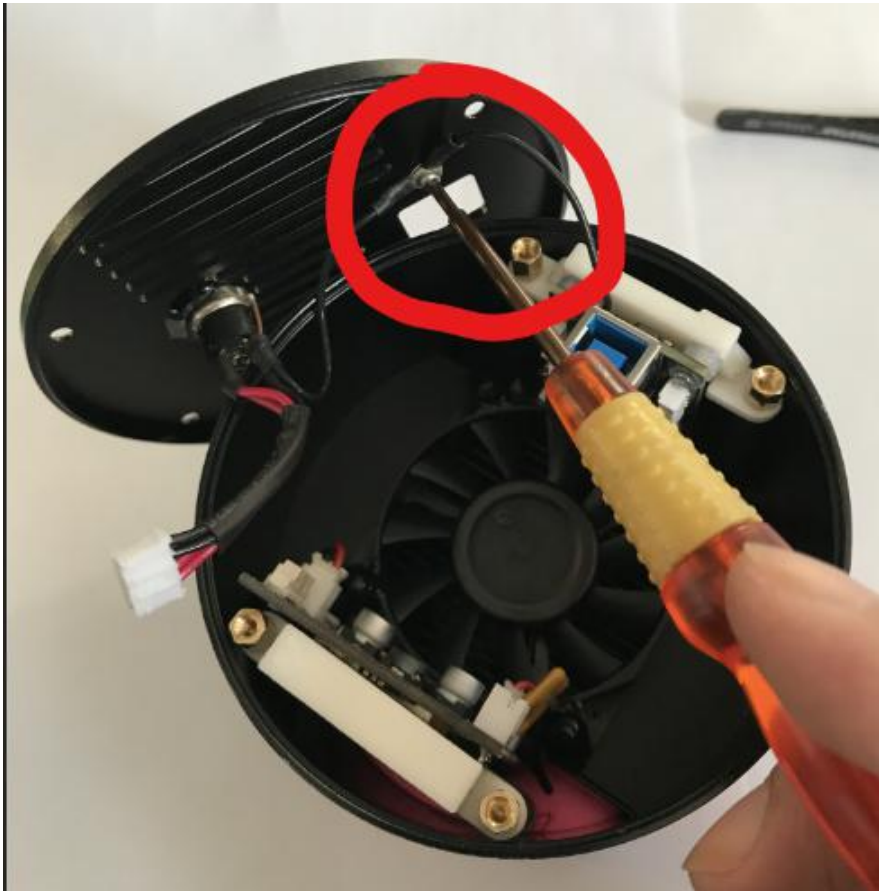

4. Remove the camera shell and reconnect the brown flat cable

